

11kV 800 AMP 4 Bolt KA Style Coupler

114BKA - Range



Pioneering the Difference.



The AusProof high voltage coupler and adaptor system demonstrates state of the art technology with an innovative design which becomes homogeneous with the cable when terminated. The design offers a continued earth shield, segregating the three phases and maintains the same Symmetrical radial distribution of voltage stress, as in the cable design. This eliminates the risk of a phase to phase fault.

The face profile and silicon rubber connector expels all air when connected, eliminating condensation, dust and corona. The type tests performed were all based on high voltage, cable specification requirements, and the results prove; that the coupler is as good as the cable.

Electrical Type Test Results 11kV 800A Coupler

Through Fault Current

20kA for 0.3 Seconds 20kA for 0.3 Seconds 20kA for 1.0 Seconds At 10 Minutes Intervals

A/C High Voltage Withstand

24kV for 1 Minute 50kV for 1 Minute 35kV for 6 Hours

Impulse Voltage

95kV - 10 POS and 10 NEG 110kV - 10 POS and 10 NEG

Partial Discharge

Prior to 6 Hour: High Voltage Withstand: 10pC Post 6 Hour:

High Voltage Withstand: 0.6pC



Technical Guide







Stock No: (See Page 4 Breakdown)
Description: Half Coupler for Trailing Cable

Rating: 11kV 800A Material: Aluminium **LOA:** 665mm Mass: 16kg Volume: 4 litres

Stock No: (See Page 4 Breakdown)

Description: Half Coupler for Armoured Cable

Rating: 11kV 800A Material: Aluminium LOA: 665mm Mass: 16kg Volume: 4 litres

Stock No: (See Page 4 Breakdown)

Description: KA Adaptor **Rating:** 11kV Adaptor Material: Aluminium LOA: 480mm Mass: 16kg Volume: 4 litres



Stock No: RS2131

Description: Insulated End Cover

Rating: 11kV Material: Aluminium

Mass: 5kg



Stock No: 2852

Description: Cast Protection Cover No

Handle/Boss



Stock No: RS2130

Description: Cast Protection Cover

Rating: 11kV Material: Aluminium



Stock No: RS112 (3 required per joint)

Description: Phase Connectors

Rating: 11kV 800A




Stock No: RS117

Description: Earth Pilot Connector

TM_697 Version: 4 Date: 04/03/2025 2




Model No Selection Guide - 11kV 800A

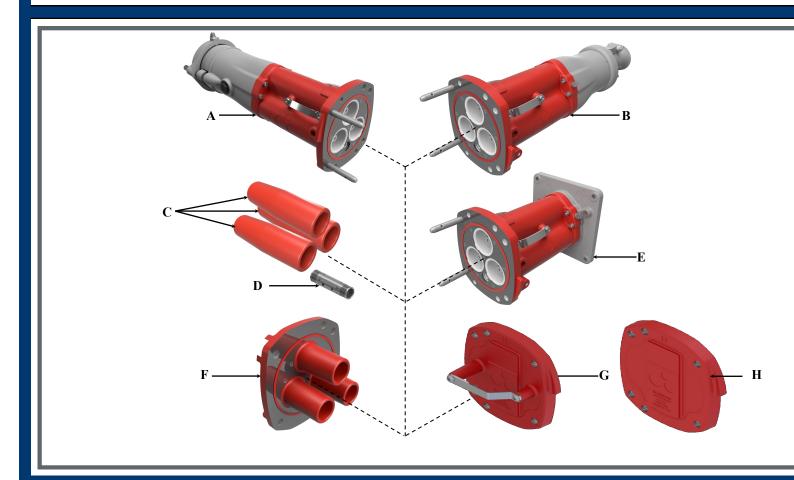

	Description	Stock No.	Page
Α	Half Coupler - Armoured Cable	-	4
В	Half Coupler - Unarmoured Cable	-	4
С	800x800 Phase Connectors	RS112	2
D	Earth Pilot Connector	RS117	2
E	Adaptor	RS1773	8
F	Insulated End Cover	RS2131	9
G	Cast Protection Cover	RS2130	10
Н	Cast Protection No Handle	2852	10



Stock Selection Guide - 11kV 800A

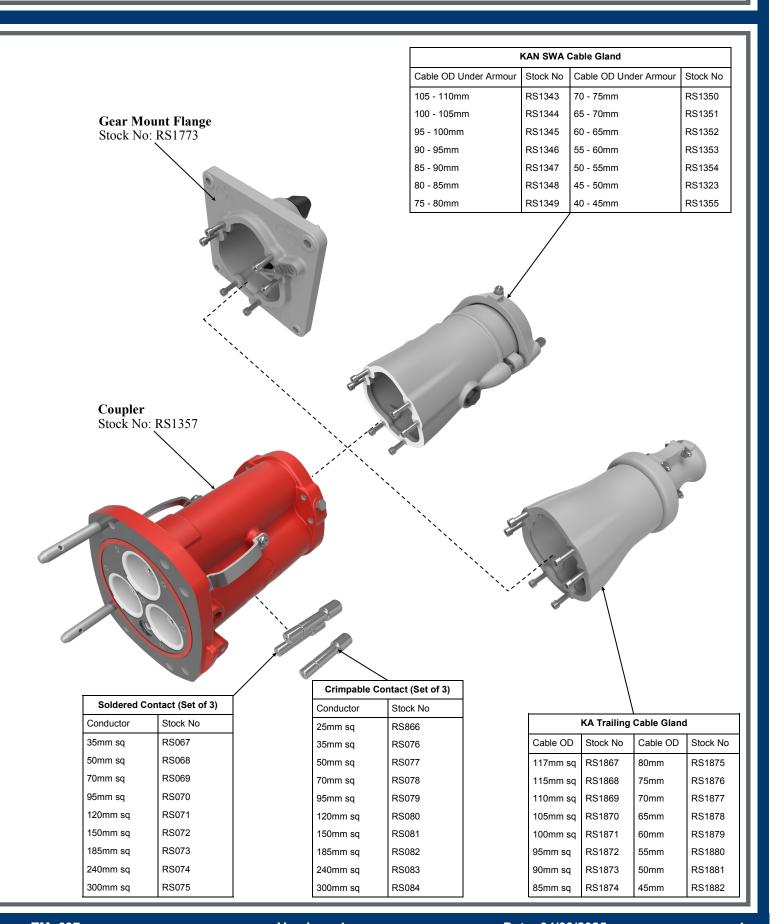




Body Assembly

Stock No: RS1357 - 11kV KA 4 Bolt Body

Amps: 800 Volume: 4 Litres

<u>Volts</u>: 11000 <u>LOA</u>: 840mm

Material: Aluminium

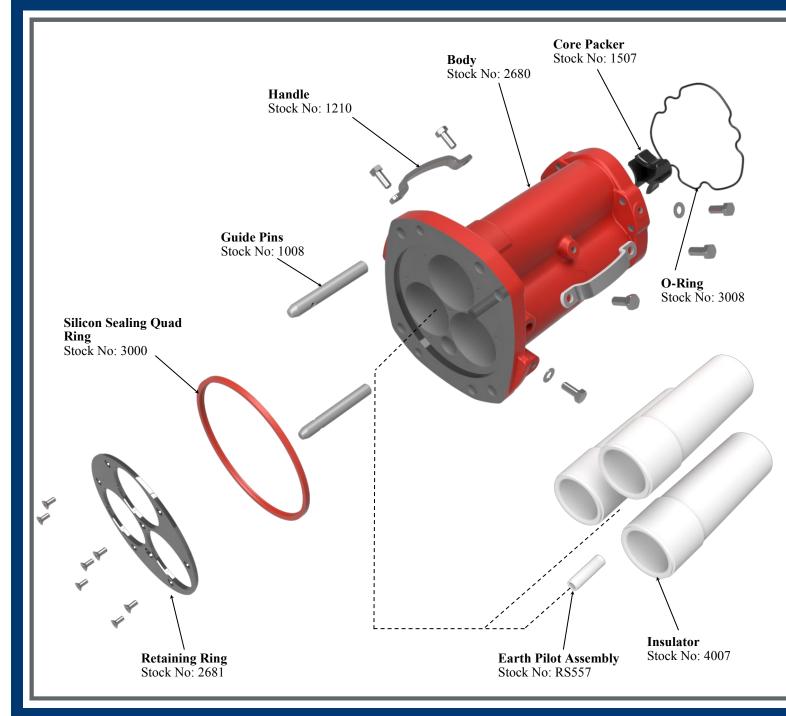



Unarmoured Gland Assembly





Armoured Gland Assembly







Panel Mount Adaptor Body Assembly


To Fit to New Switch Gear Stations

Stock No: RS1773 - 11kV KA Adaptor Flange

Mass: -

Volts: 11000

Material: Aluminium

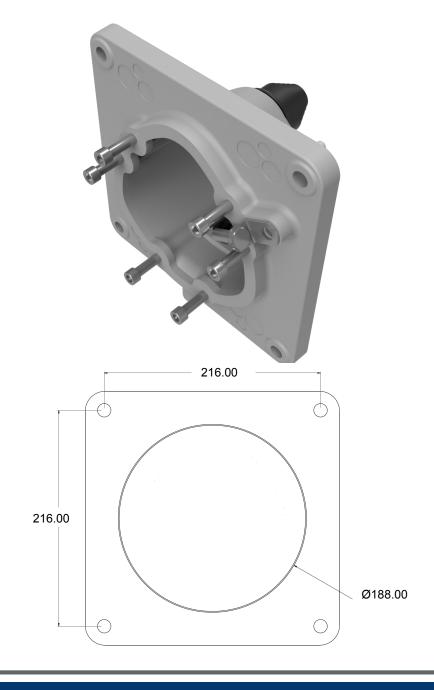



Insulated End Cover Assembly


Accessories

Stock No: RS2131—11kV KA 4B Insul. End Cover

<u>Mass</u>: -

Volts: 11000

Material: Aluminium

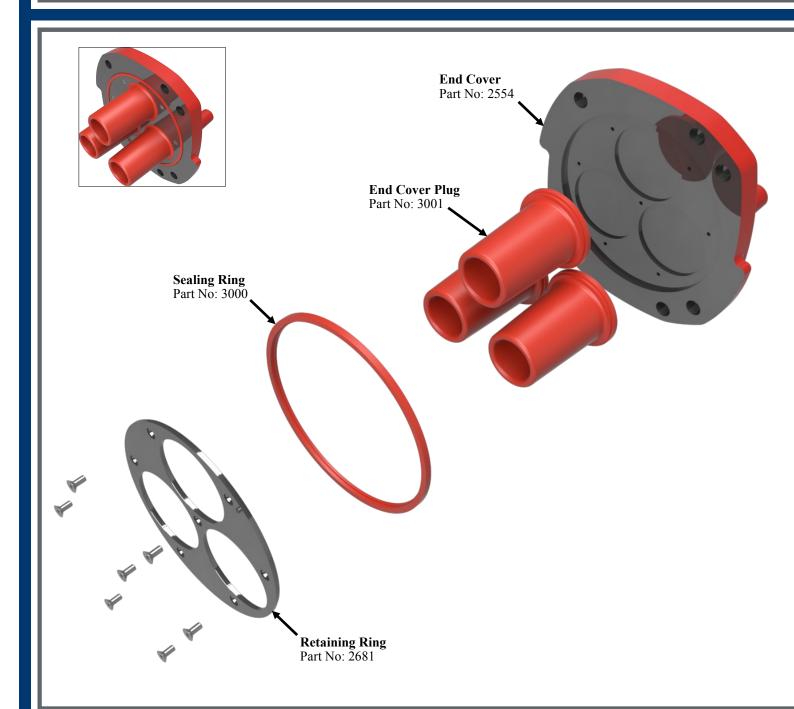



Accessories

Stock No: 2555 — 11kV KA 4B Cast Pro Cover

Mass: -

Volts: 11000

Material: Aluminium



Cast Pro Cover Part No: RS2130



Cast Pro Cover No Handle Part No: 2852


RS178



Insul. End Cover Part No: RS2131

Phase Guide Stick Set for Assembly 3 Included



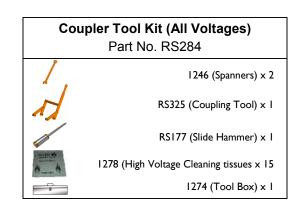




Termination Kits for Unarmoured Cable

11kV Termination Kit Large 24mm-48mm

RS323 (To suit core outer diameter 24mm-48mm) 4L Compound 3 x QT5672 I x CC2 I x I3 Tape

11kV Termination Kit Small 16mm-28.5mm

RS406				
(To suit core outer diameter	16mm-28.5mm)			
	4L Compound			
	3 x QT5672			
	I x CC2			
1	I x 13 Tape			

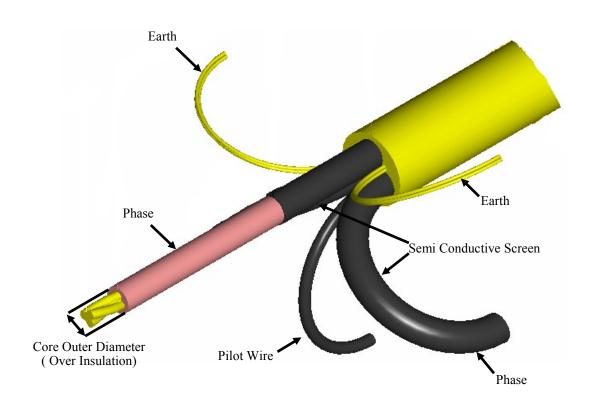



Termination Kits for Armoured Cable


11kV SWA Termination Kit Large 24mm-48mm


RS552 (To suit core outer diameter 24mm-48mm) 4L Compound QT5672 x 3 CC2 x I 13 Tape x I Heat Shrink x I Steel Cable Ties x 2

11kV SWA Termination Kit Small 16mm-28.5mm


RS551						
(To suit core outer diameter						
I 6mm-28.5mm)						
	4L Compound					
	QT5671 × 3					
	CC2 x I					
1	13 Tape x 1					
	Heat Shrink x I					
	Steel Cable Ties x 2					

11kV SWA Termination Kit Extra Small 11mm-17mm

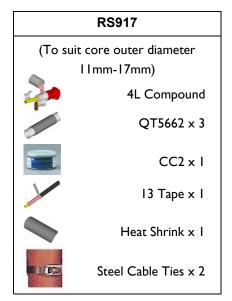

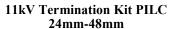



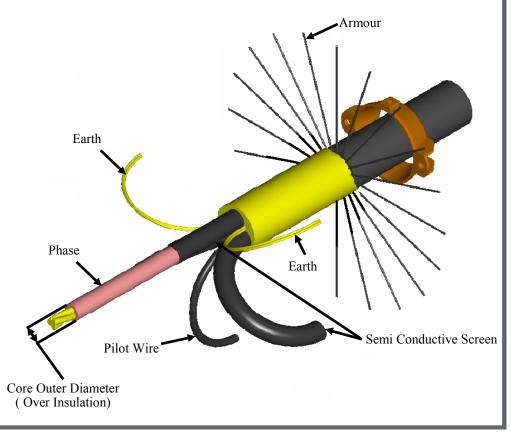




Open Cut Bolted Coupler Skid for 11kV

Stock No: RS186 - 11kV 4 Bolt Standard Skid

<u>Mass</u>: -

Volts: 11000


Material: Aluminium

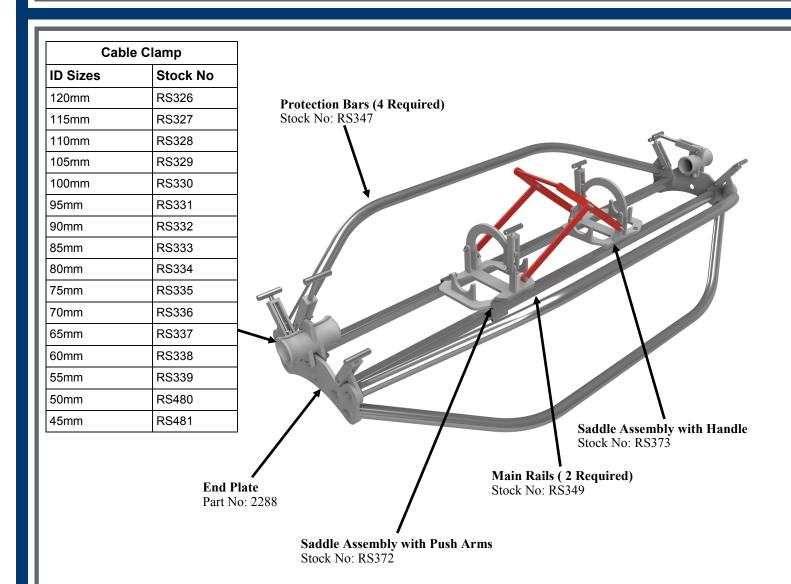



KA 11kV 800A Unarmoured


Termination Procedure

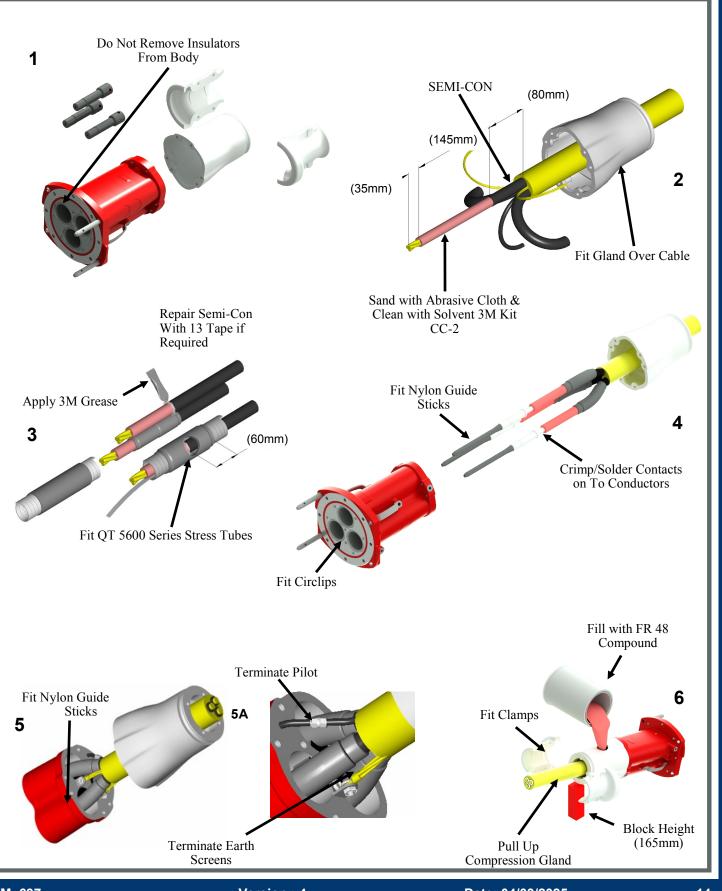



KA 11kV 800A Gear Mount Adaptor


Termination Procedure

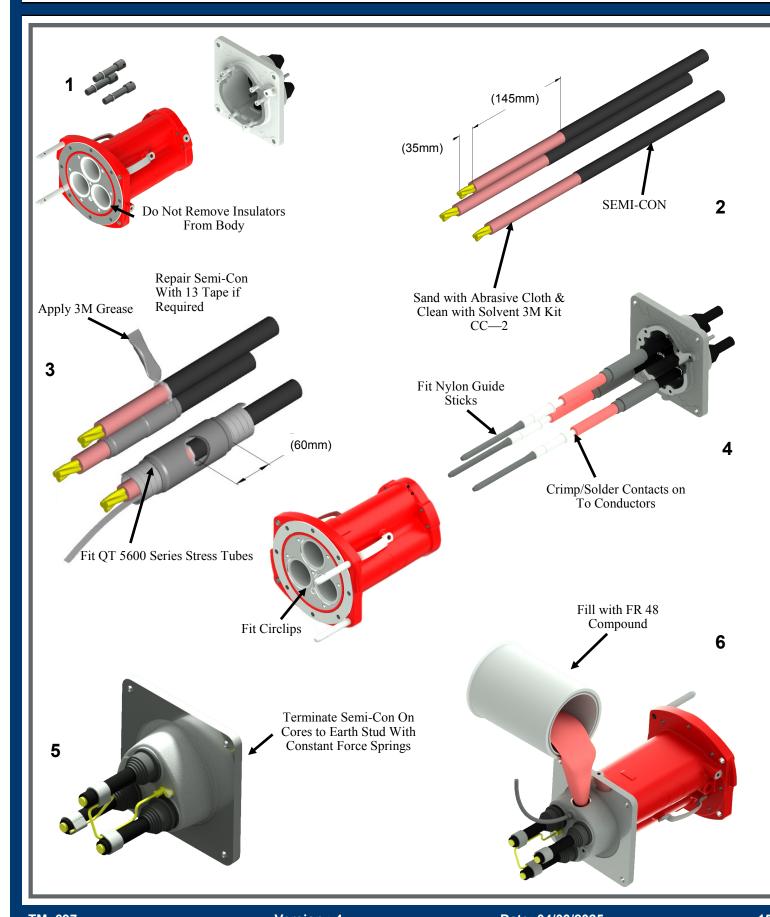



KA 11kV 800A Armoured


Termination Procedure

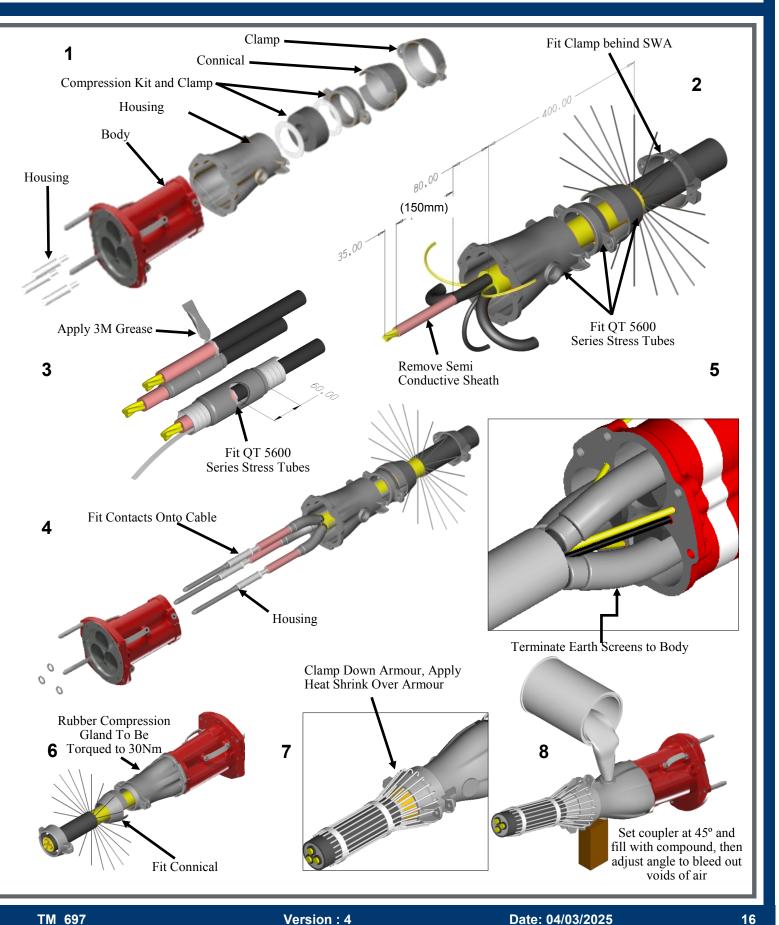

TM_697 Version: 4 Date: 04/03/2025



Contact Pulling Tool Operation

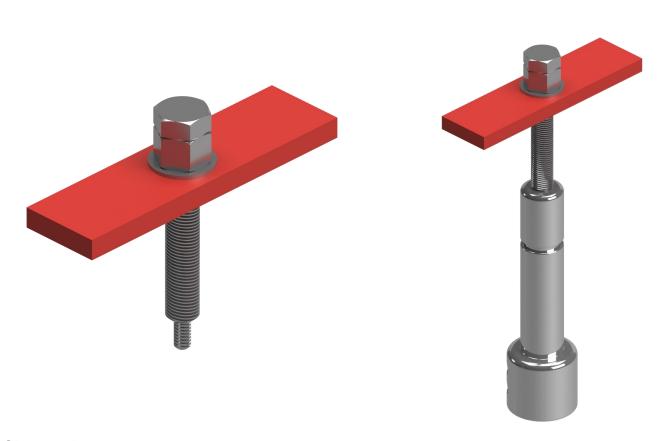

Observation


Inspect the front end of the coupler or adaptor, paying special note to the condition of the circlip on each phase. Each circlip should be sitting evenly on the contact. If more of the circlip protrudes out of one side, then the circlip needs to be replaced.

If the circlip needs to be adjusted or replaced, the following will need to be performed

- Ensure power is not connected.
- For a coupler, loosen the clamp on the gland to slightly release the grip on the cable.
- Clean out threaded hole in end of contact with air or cloth
- Place a new circlip over the end of the contact.
- Screw the bolt of the assembled pulling tool into the end of the contact
- Push the steel plate up against the face of the coupler.
- Tighten the nut and washer up to the steel plate.
- Using a spanner, tighten the nut against the steel plate to pull the contact back into place.
- Whilst in this position, replace the circlip.
- After all three contacts are satisfactory, retighten the gland.



Inserting Connectors and Coupling Operation

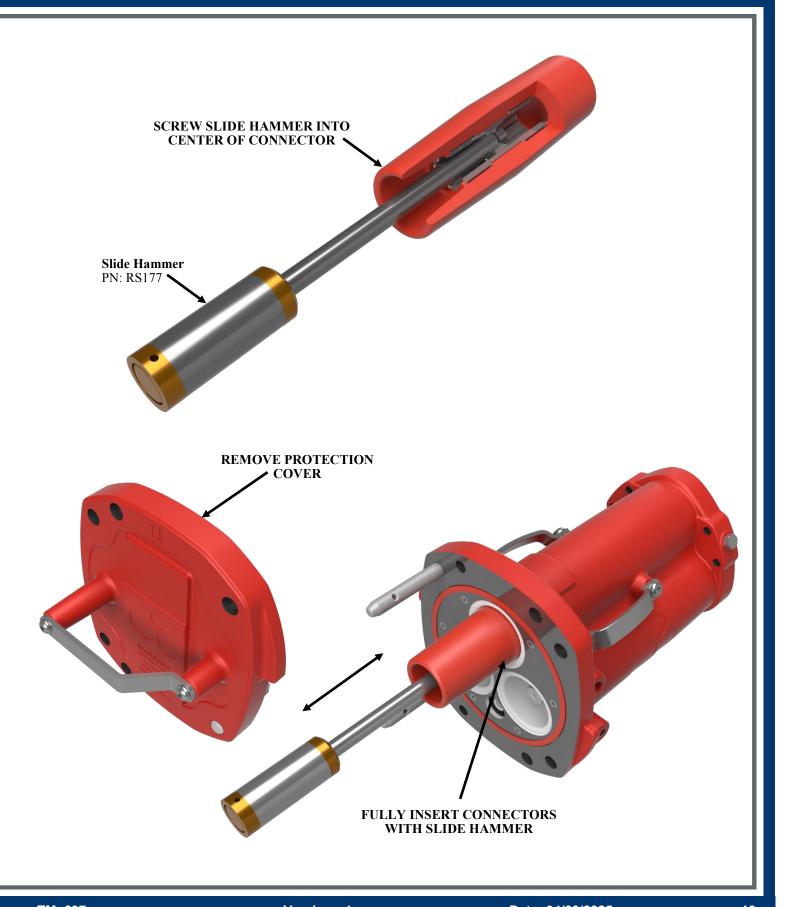



Offsite Checks & Testing Procedures

For 11kV Aluminium Coupler System

To compliment existing procedures and practices currently existing in cable repair workshop, the following is designed to be completed as a minimum to ensure the safe and long operation of the AusProof coupler system

Routine Checks and Inspection

- When cables are not in use or stored, ensure that a cast protection end cover is fitted that provides adequate sealing against moisture.
- Ensure that witness marks are brightly painted on the sheath, located where the cable enters
 the gland. This needs to be routinely inspected to check if a gap appears between the end of
 the gland and the witness mark.
 - A gap may indicate that the cable has been under tension and that the termination in the coupler may have moved.
- Inspect the male pin in the coupler for obvious signs of damage. Also inspect the location of the nylon locking circlip to ensure that it is evenly fitted onto the contact.
 - If the circlip appears dislocated or damaged then repairs are necessary. This event indicates that the termination in the coupler has been under tension as a result of handling.
- Ensure the tension on the gland housing compression ring is maintained. This process requires that the four compression ring bolts are tensioned.
- Check silicon seals are clean and are fully intact.
- Thoroughly clean the insulators and face of the coupler with suitably approved solvent.





6 Shona Avenue Gladstone Queensland 4680

Phone: +61 7 49784000

Facsimile: +61 7 49785685